



REAR CENTER SEAT OUTER BELT ASSEMBLY

COMPONENTS

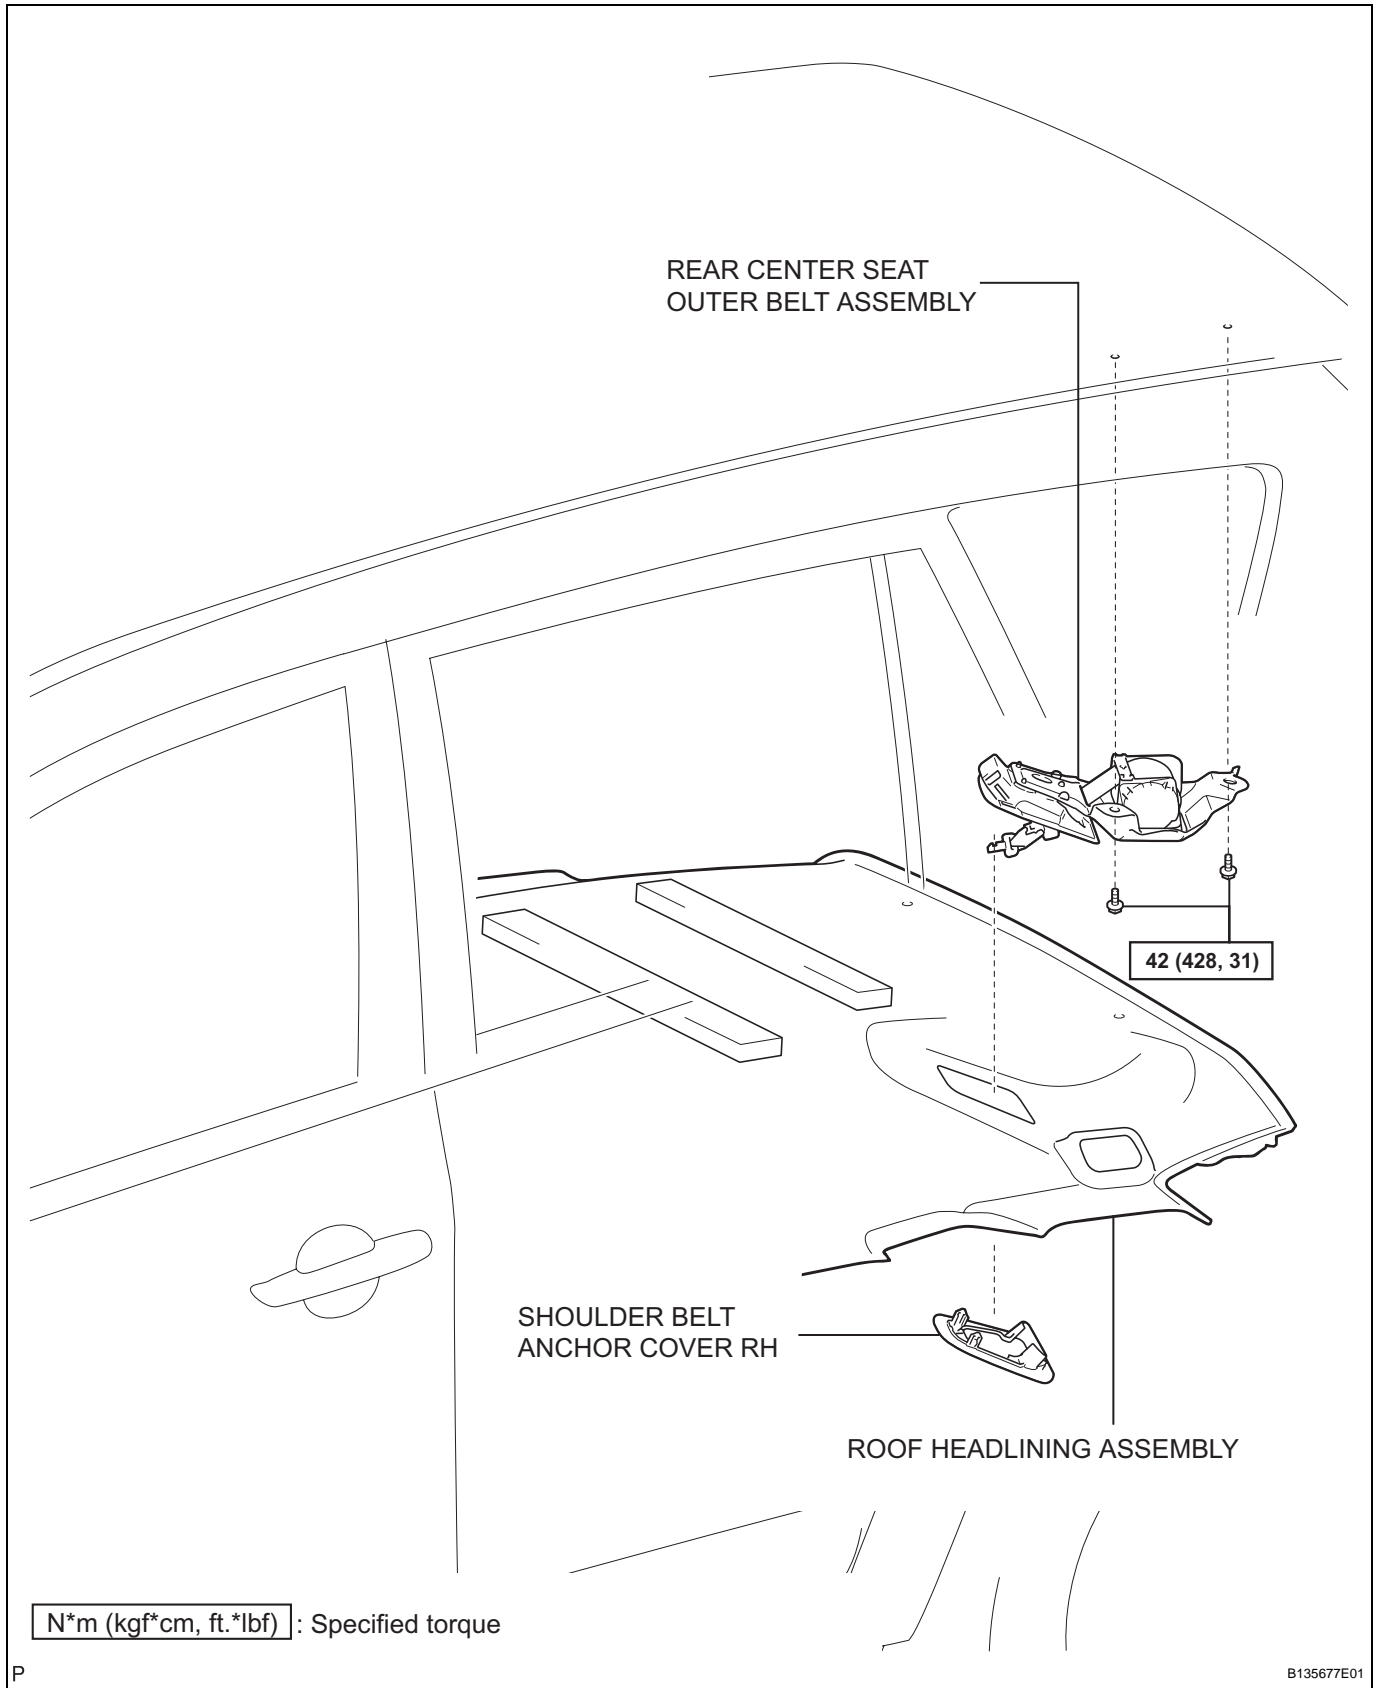


SB


w/ Curtain Shield Airbag

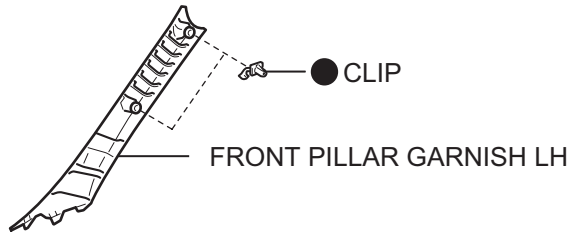

CENTER PILLAR GARNISH LH

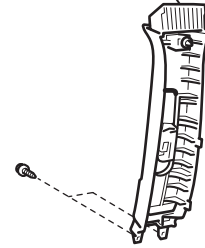

FRONT PILLAR GARNISH LH

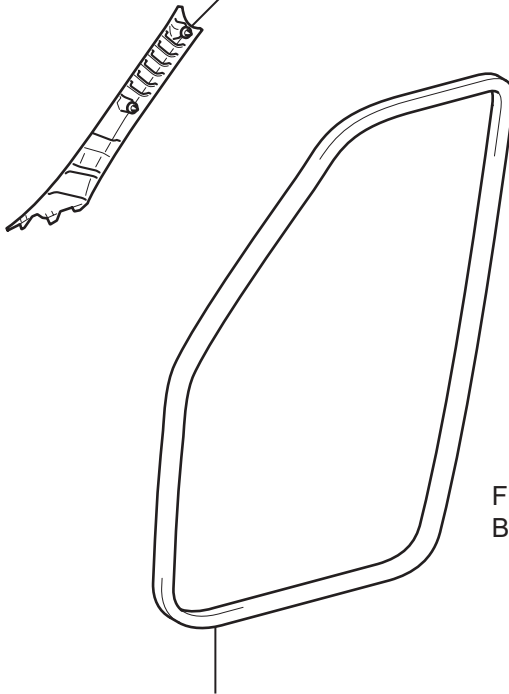



LAP BELT OUTER ANCHOR COVER

42 (428, 31)

FRONT SEAT OUTER BELT ASSEMBLY LH

LOWER CENTER PILLAR GARNISH LH

 
FRONT DOOR OPENING TRIM WEATHERSTRIP LH

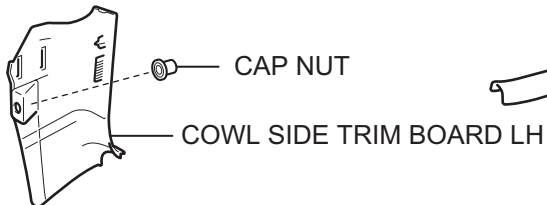


N*m (kgf*cm, ft.*lbf) : Specified torque

● Non-reusable part


w/ Curtain Shield Airbag

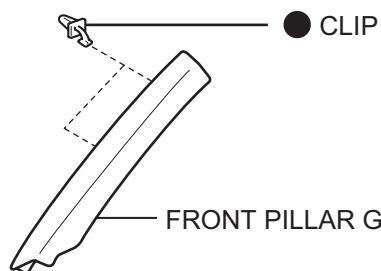

CENTER PILLAR GARNISH RH

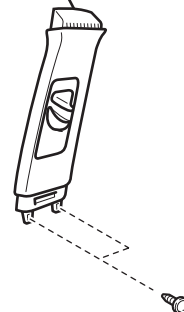

FRONT PILLAR GARNISH RH

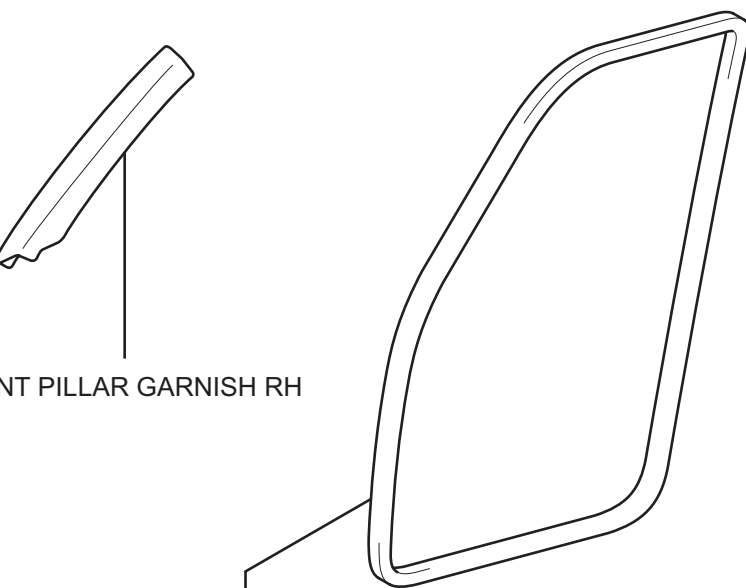


FRONT DOOR OPENING TRIM WEATHERSTRIP RH

LOWER CENTER PILLAR GARNISH RH

FRONT SEAT OUTER BELT ASSEMBLY RH

LAP BELT OUTER ANCHOR COVER

42 (428, 31)

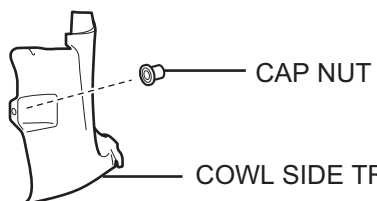


FRONT DOOR SCUFF PLATE RH

N*m (kgf*cm, ft.*lbf) : Specified torque

● Non-reusable part


SB

w/o Rear No. 2 Seat

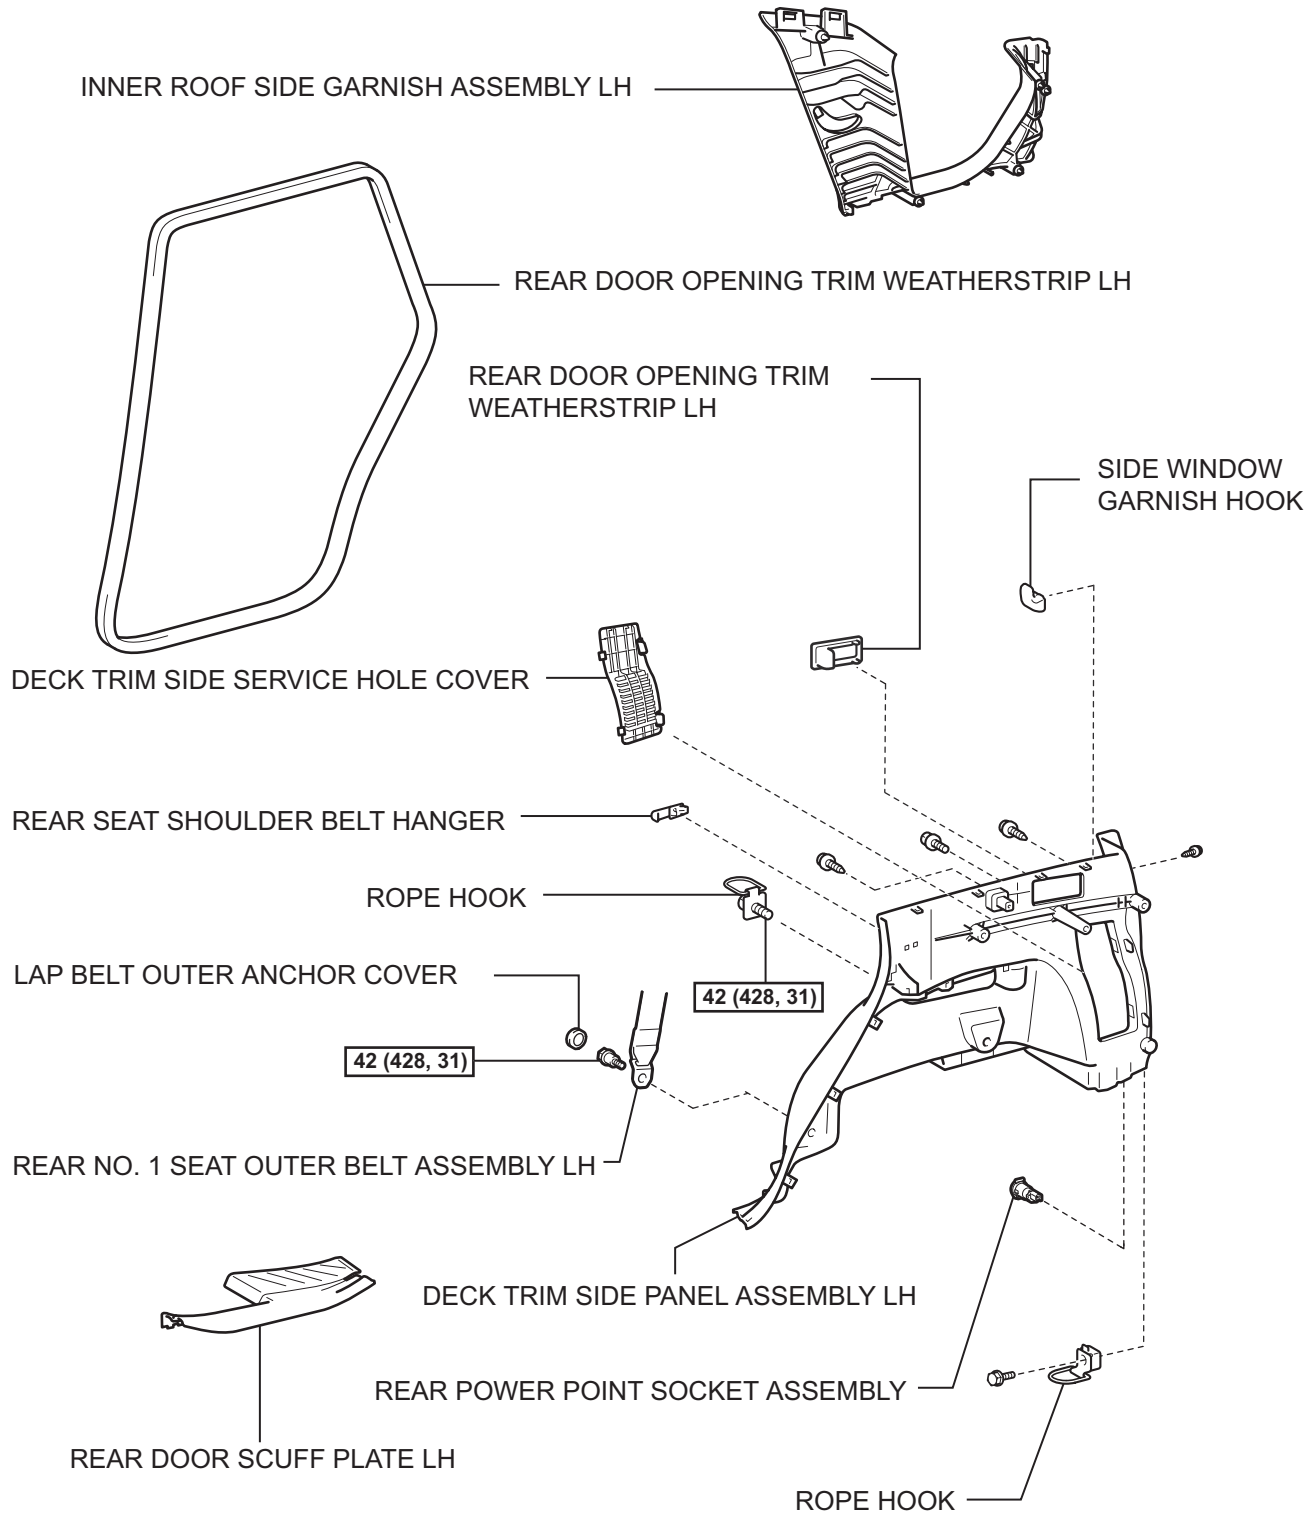


N*m (kgf*cm, ft.*lbf) : Specified torque

w/ Rear No. 2 Seat

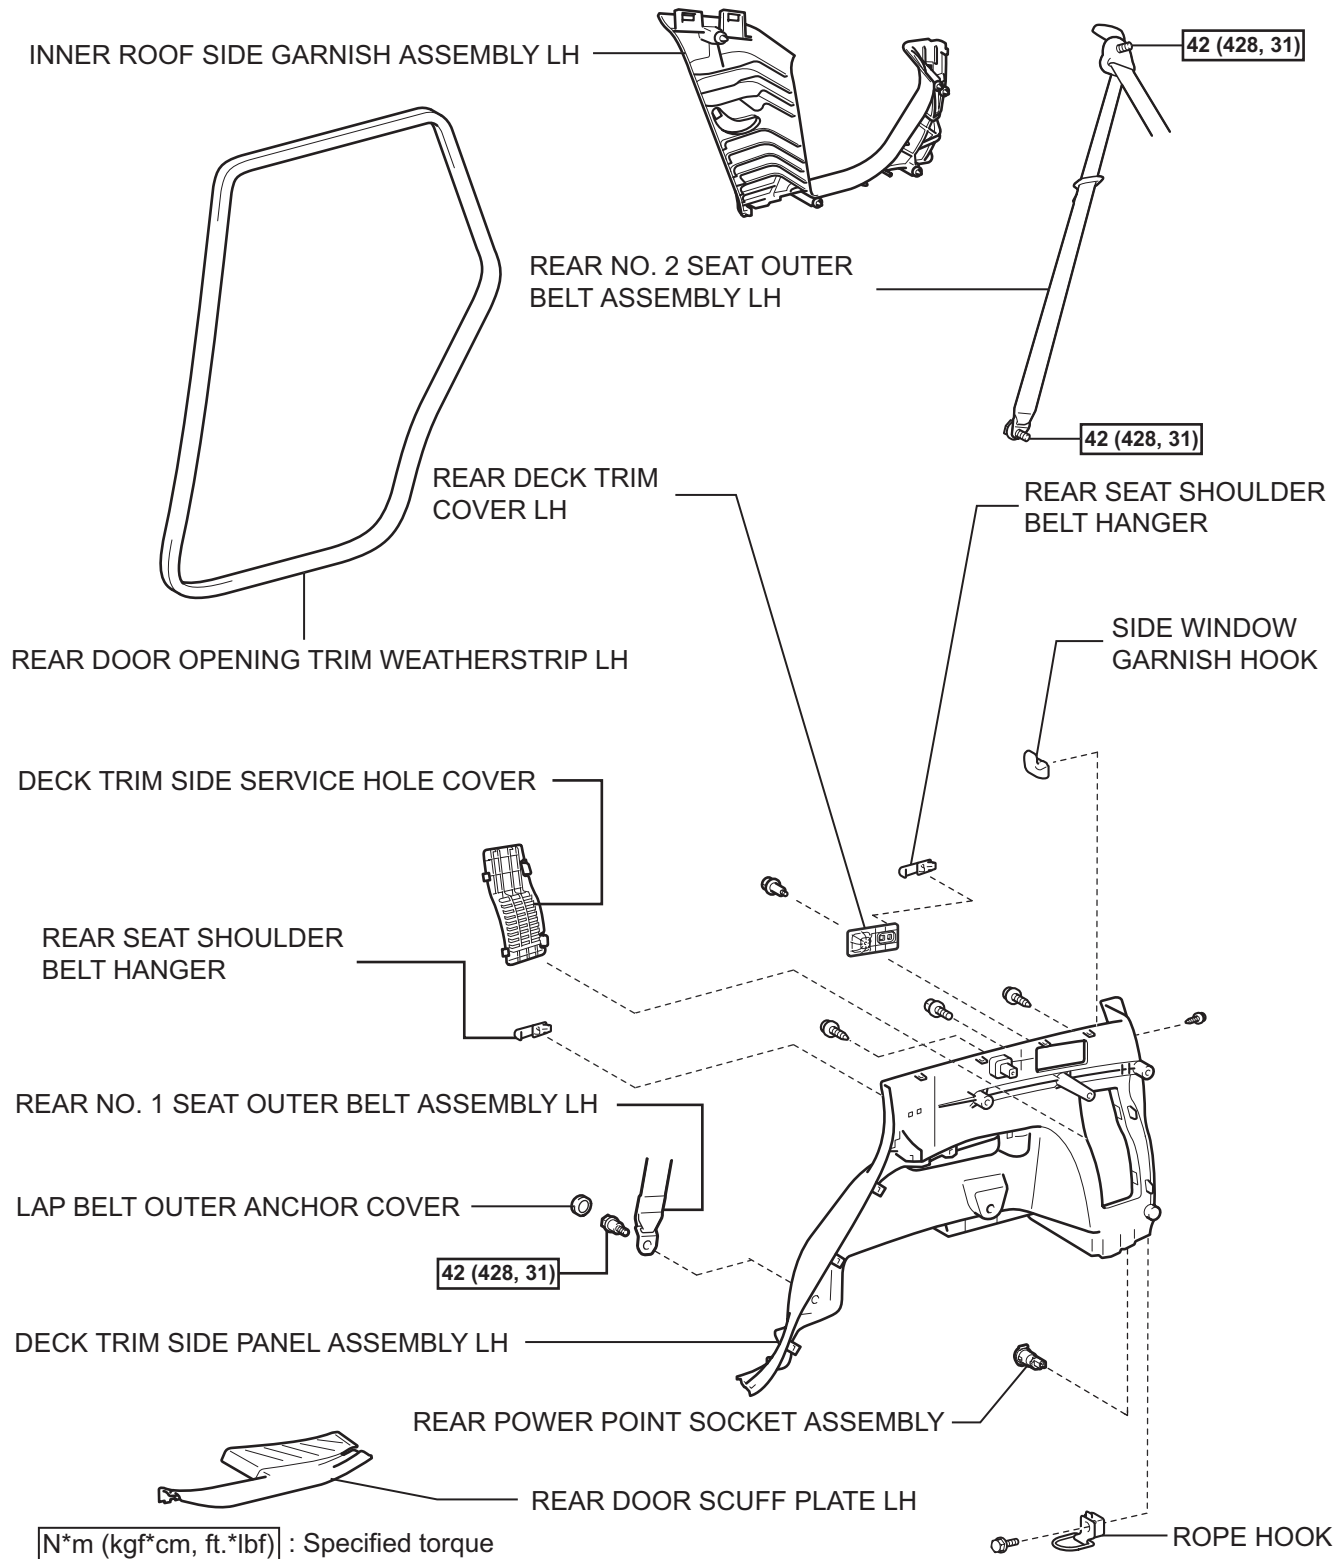


SB


w/o Rear No. 2 Seat

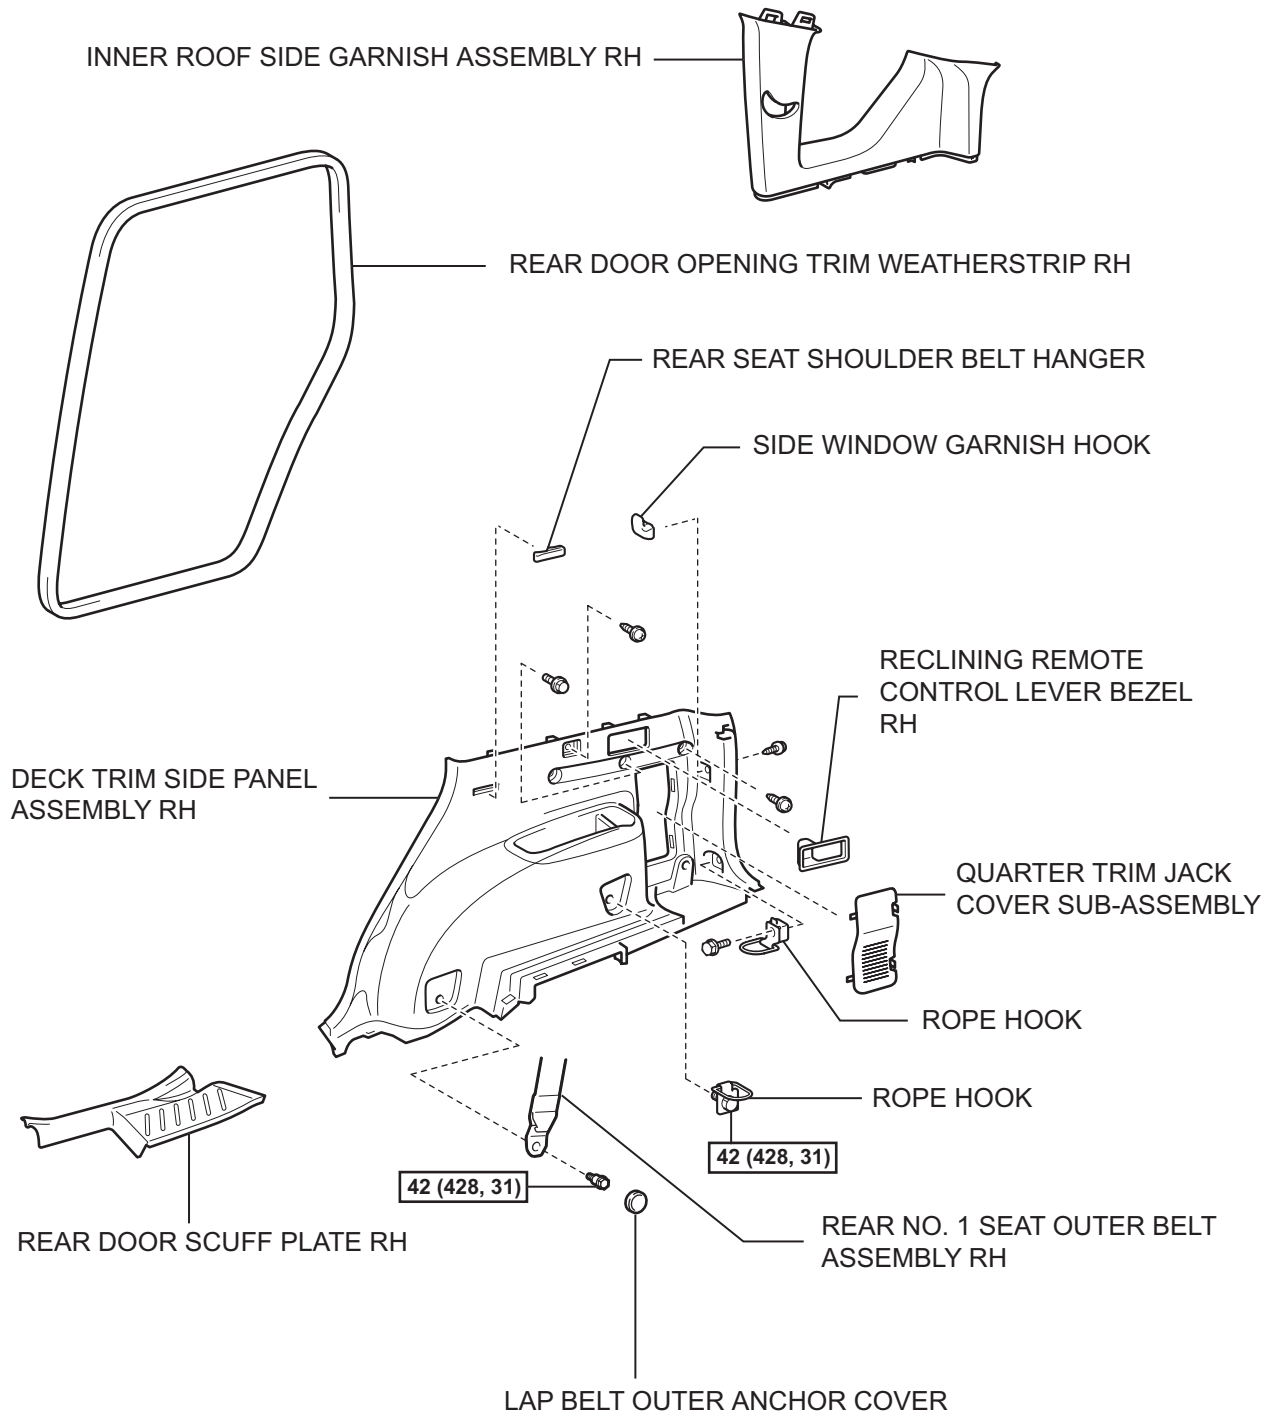

N*m (kgf*cm, ft.*lbf) : Specified torque

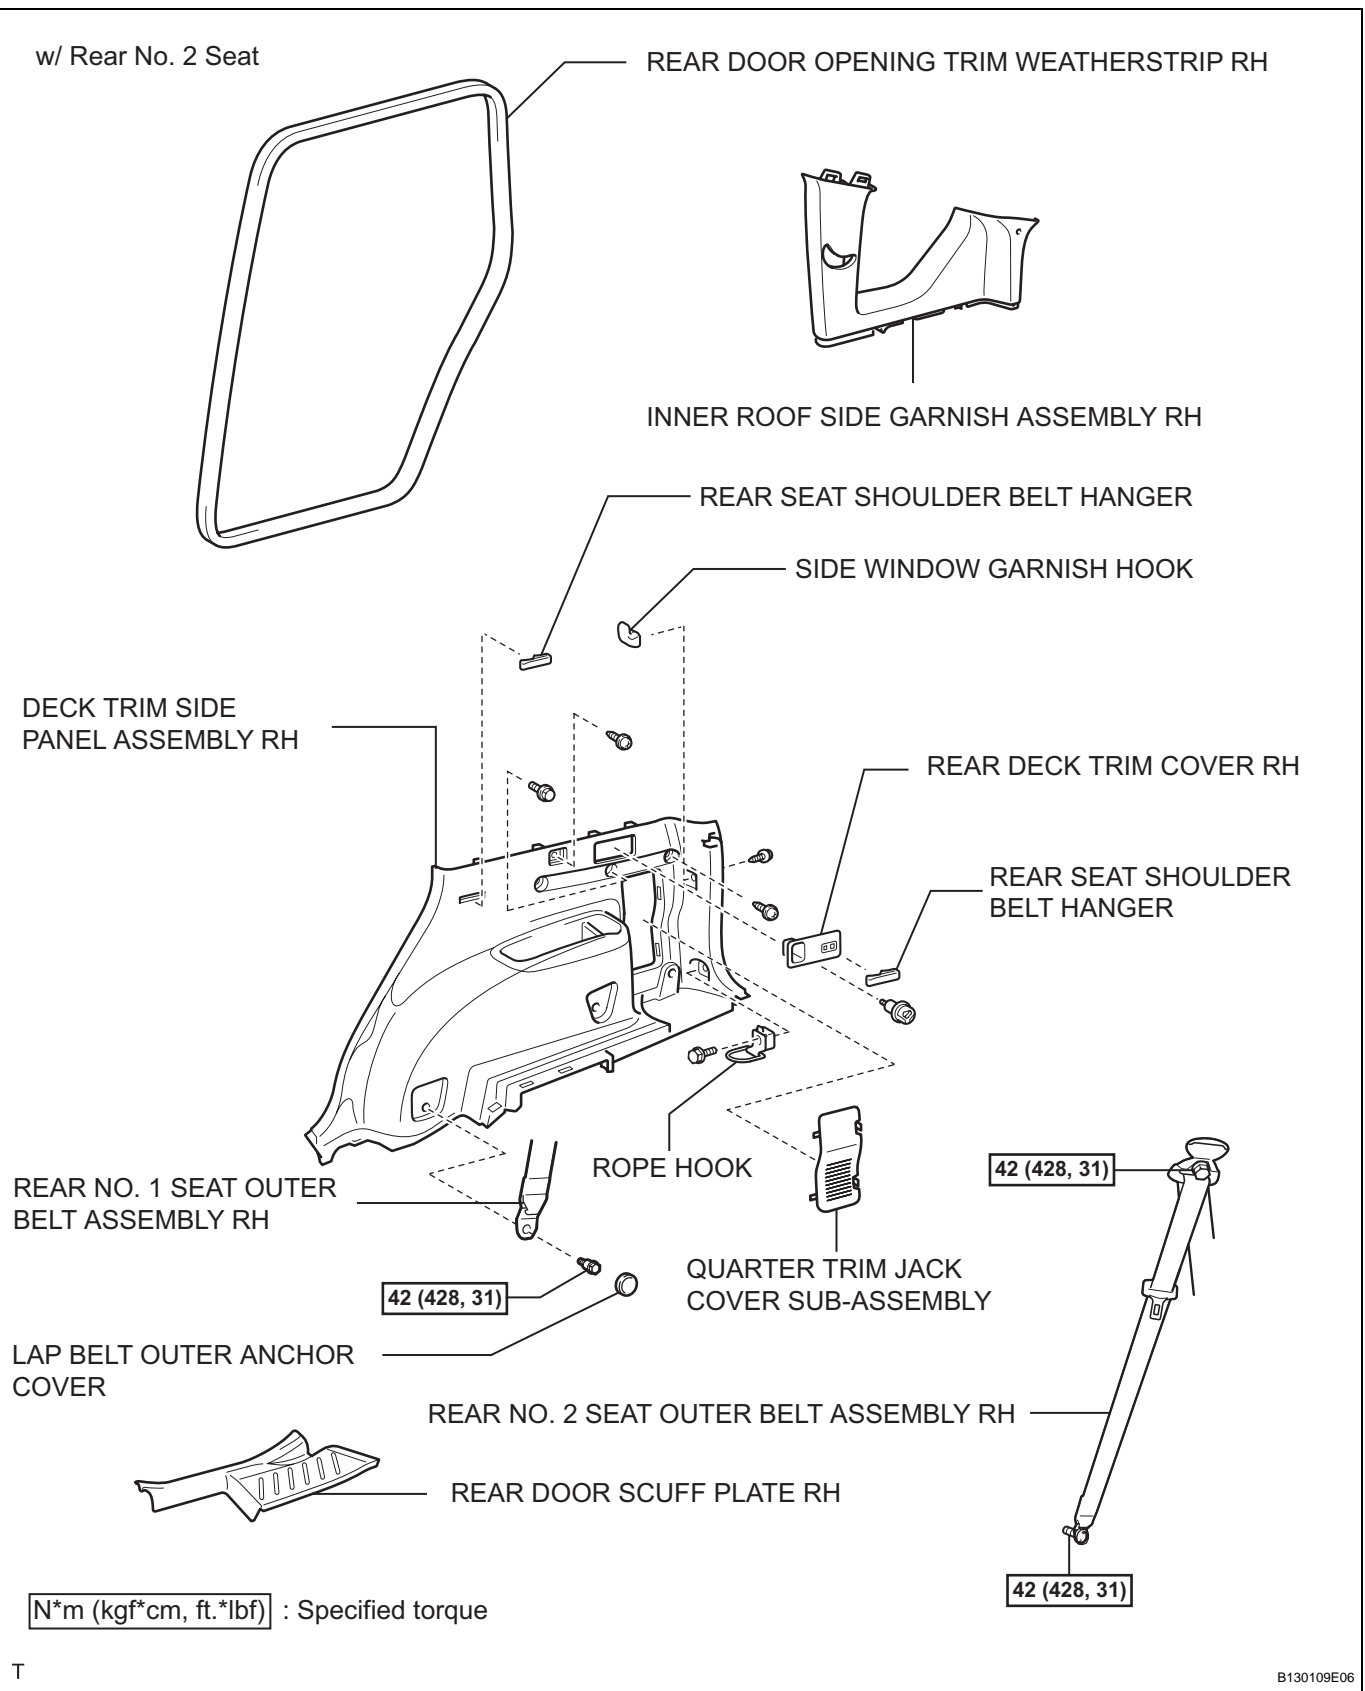


w/o Rear No. 2 Seat

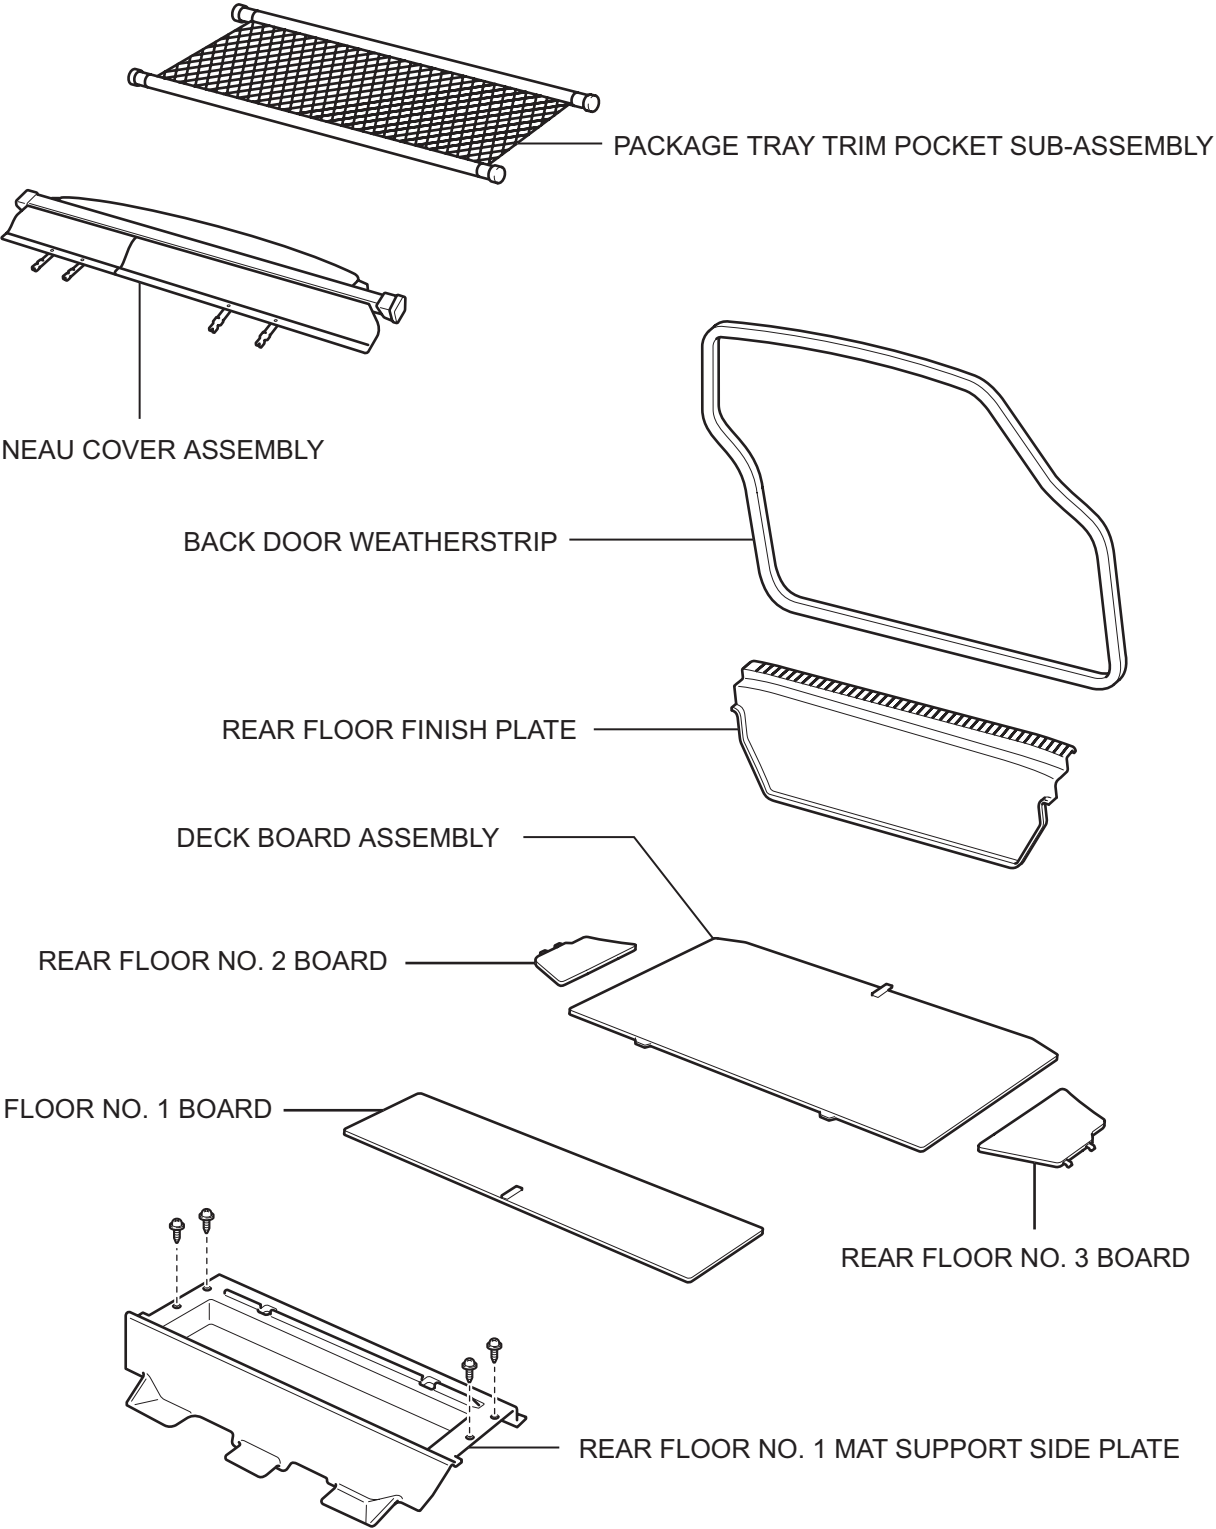


SB

w/ Rear No. 2 Seat

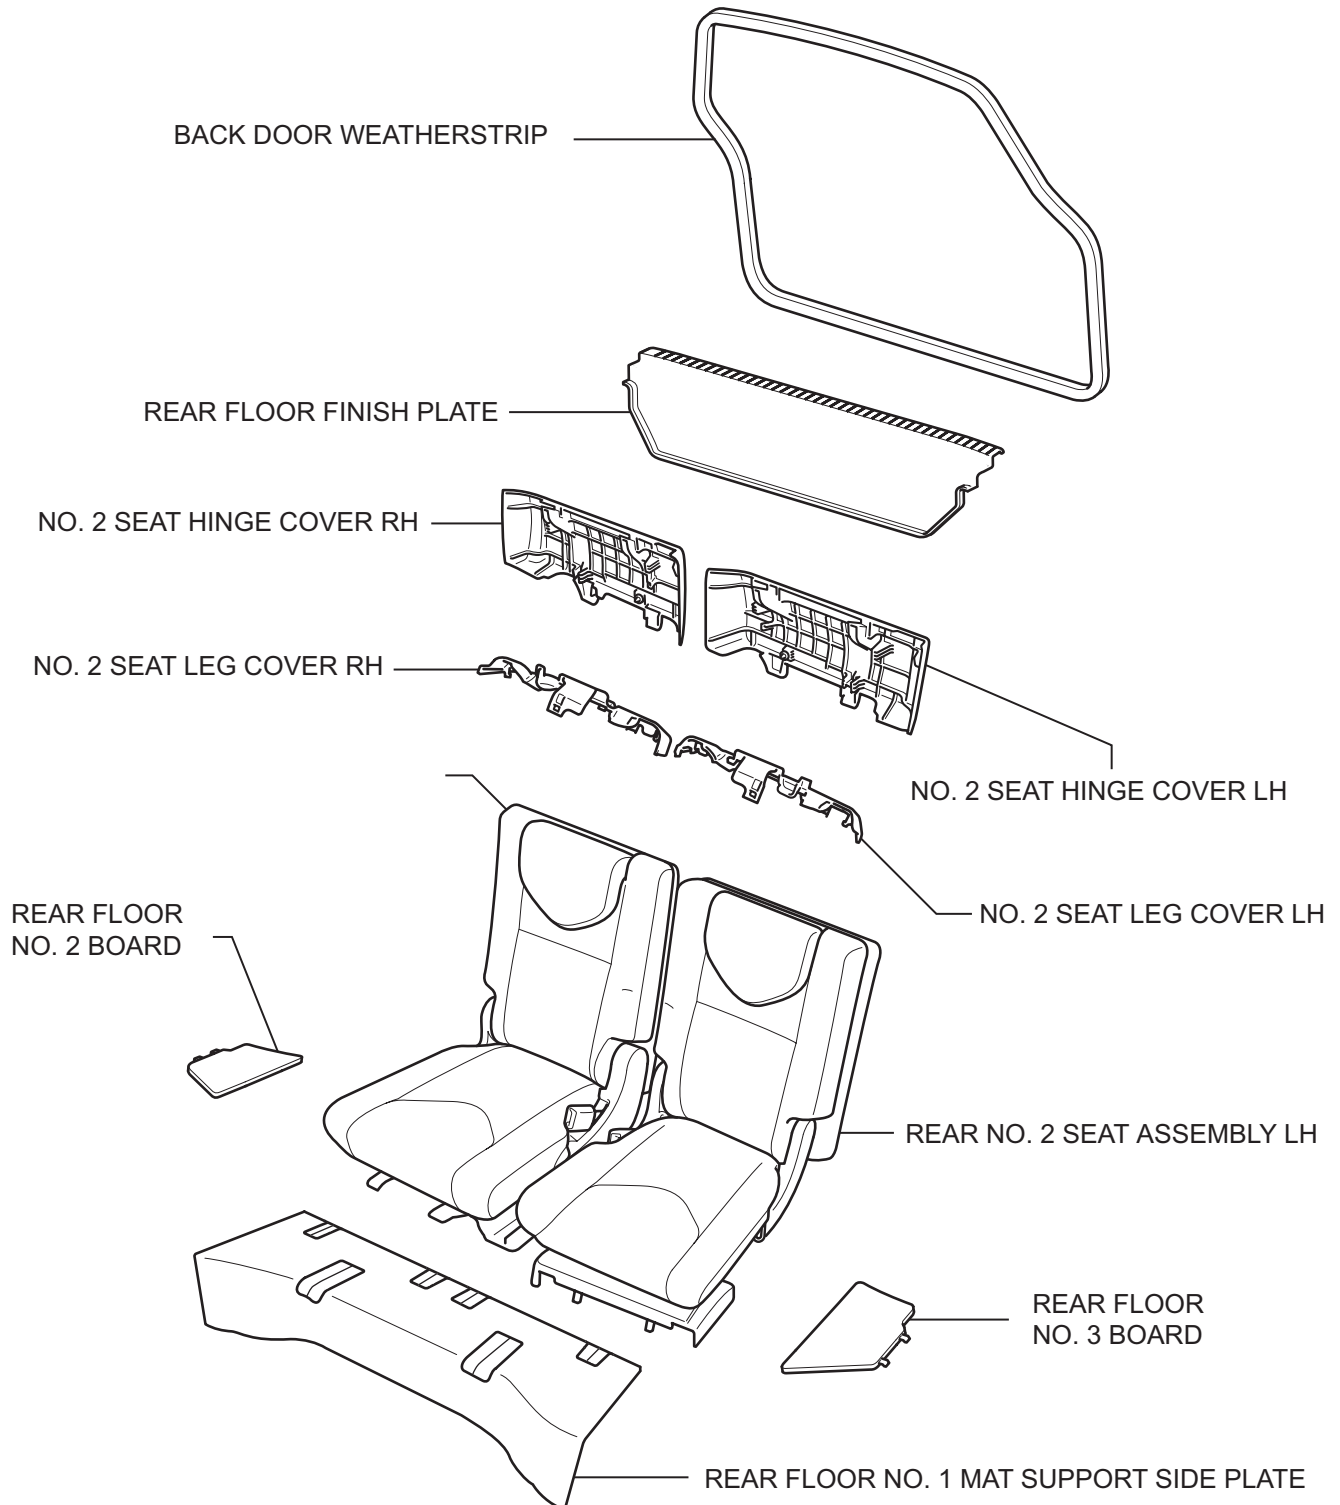
**SB**

INSTRUMENT PANEL SUB-ASSEMBLY

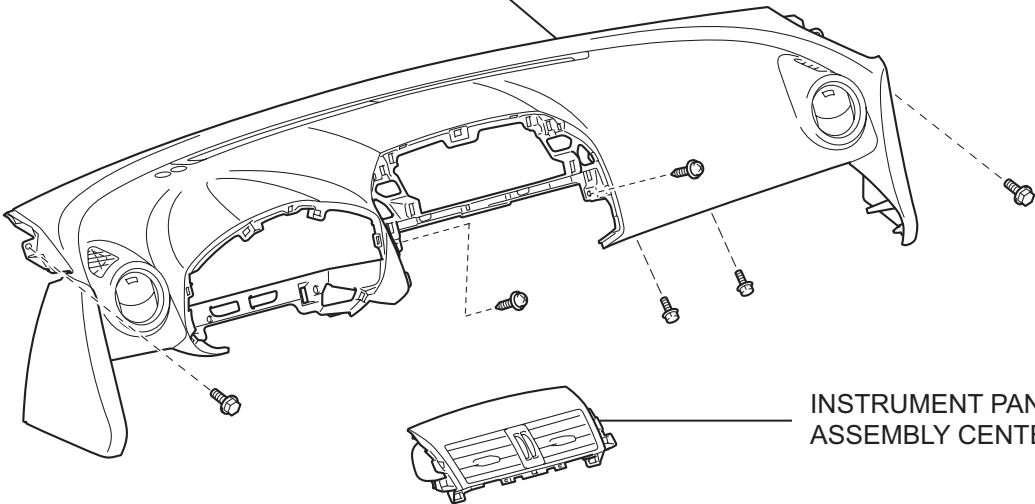


INSTRUMENT PANEL REGISTER
ASSEMBLY CENTER

 
NO. 2 INSTRUMENT
CLUSTER FINISH PANEL
CENTER




NO. 1 INSTRUMENT
CLUSTER FINISH
PANEL CENTER

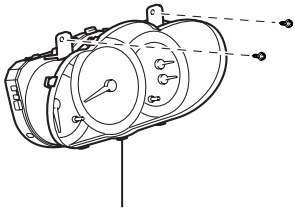

COMBINATION METER ASSEMBLY

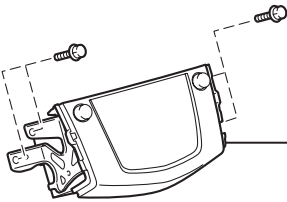


RADIO RECEIVER

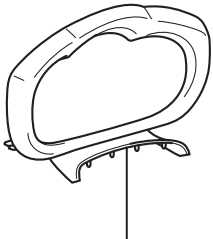


INSTRUMENT CLUSTER FINISH PANEL ASSEMBLY

GLOVE COMPARTMENT DOORSTOPPER
SUB-ASSEMBLY

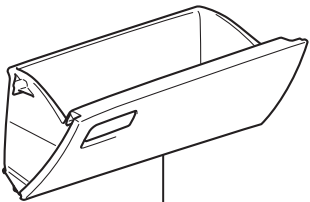

GLOVE COMPARTMENT
DOOR ASSEMBLY


SB

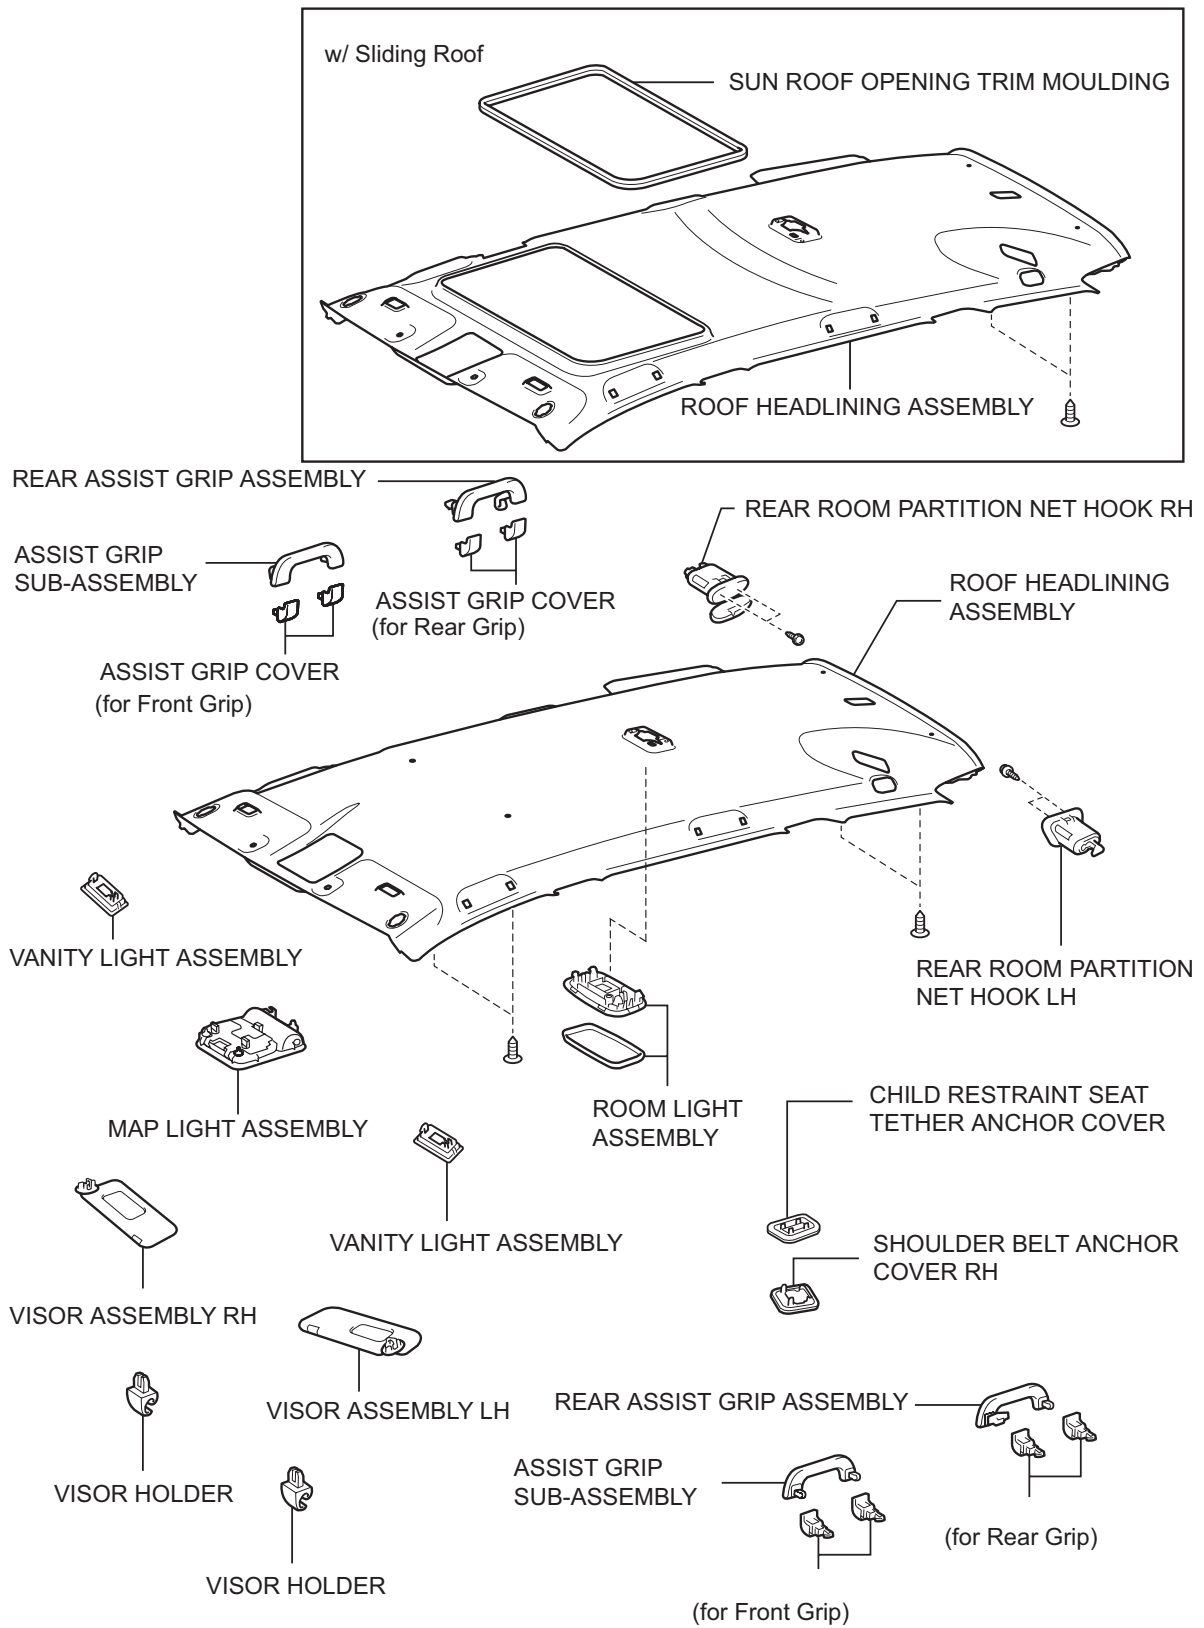

REMOVAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

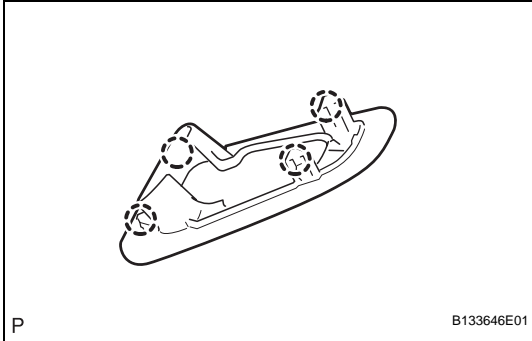

1. REMOVE SHOULDER BELT ANCHOR COVER RH

- (a) Using a screwdriver, remove the 4 claws and cover.

HINT:

Tape the screwdriver tip before use.

2. REMOVE ROOF HEADLINING ASSEMBLY



HINT:

It is not necessary to completely remove the roof headlining. Slightly lower the rear section of the roof headlining.

- (a) Partially remove the roof headlining (see page [IR-26](#)).

3. REMOVE REAR CENTER SEAT OUTER BELT ASSEMBLY

- (a) Remove the 2 bolts and seat belt.

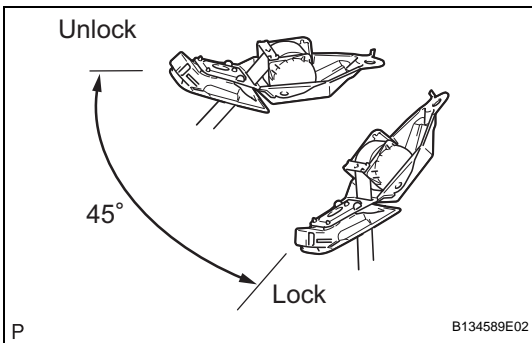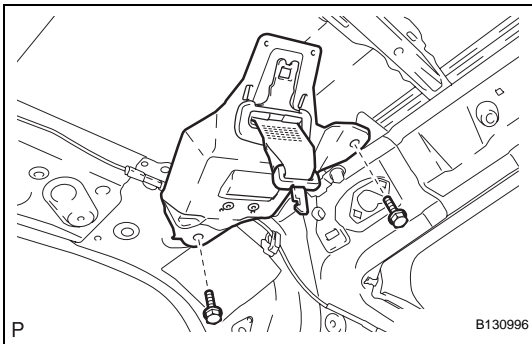

INSPECTION

1. INSPECT REAR CENTER SEAT OUTER BELT ASSEMBLY

NOTICE:

Do not disassemble the retractor.

- (a) When the inclination of the retractor is 15° or less, check that the belt can be pulled from the retractor. When the inclination of the retractor is over 45°, check that the belt locks.

If the operation is not as specified, replace the belt.


INSTALLATION


1. INSTALL REAR CENTER SEAT OUTER BELT ASSEMBLY

- (a) Install the seat belt with the 2 bolts.
Torque: 42 N*m (428 kgf*cm, 31 ft.*lbf)

2. INSTALL ROOF HEADLINING ASSEMBLY

- (a) Install the roof headlining (see page [IR-49](#)).

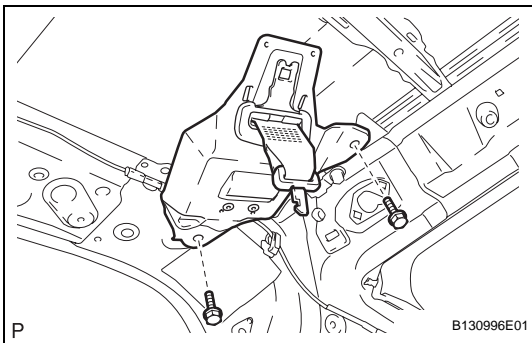

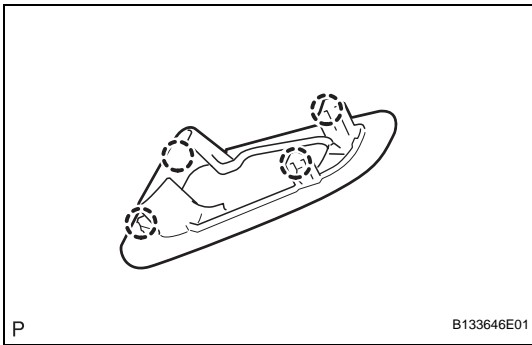

3. **INSTALL SHOULDER BELT ANCHOR COVER RH**
 - (a) Install the cover with the 4 claws.